


**UNIVERSAL DEVICE PICTORIAL INSTALLATION GUIDE**

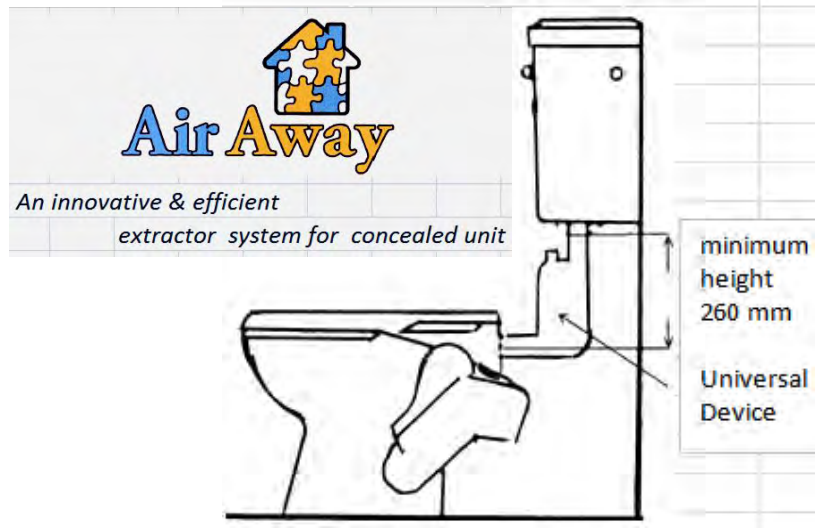

ANY TECHNICAL OR INSTALLATION INFORMATION, PLEASE CONTACT THE AIRAWAY OFFICE ON: 020 8452 2281 or EMAIL: sales@airaway.biz



**Step 1 :-**

Remove the flush pipe and connect the Universal device between the cistern and the toilet bowl. Cut the flush pipe to the two required lengths "A" & "B"

Length "A" to join the cistern to the Universal device.  
Length "B" to join Universal device to the toilet bowl.



**Step 2 :-**

Insert the cut length "A" to the Universal inlet wrapping with plumbing tape or applying a small amount of plumbing glue (PVC pipe adhesive) as necessary.


Length "A"



**Step 3 :-**

Insert the cut length "B" to the Universal outlet and the other end with rubber connector to the toilet bowl.

**IMPORTANT:** Insert of length "B" after rubber connector should NOT exceed 12 mm.

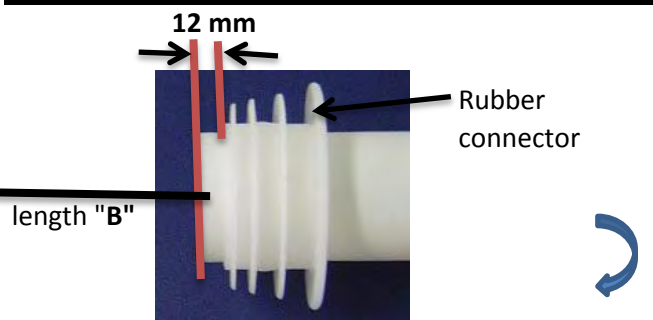



**Step 4:-**

Fit the Universal device complete with inlet flush pipe to the cistern and tighten the lock nut.



**for 50 mm flush pipe use the reducer included**

50 mm to 40 mm reducer



ID switch



Passive Infra-Red sensor

**PIR activation mode:-**

(M) & (A) slide switch on the the side of the PIR sensor.

(M) activated by slow hand movement  $\pm 150$ mm.

(A) detection range by movement  $\pm 3$  meters.

**RED** indicator light

**Step 5:-**

Plug in the power supply [ L ] jack from the 12 V DC adaptor (included in the packing).

Pair the Universal by pressing the ID switch.(as shown) **[replace the rubber bush after pairing]**

Slowly move your hand across the PIR sensor and the **RED** light on the PIR will flash and the "Universal" will

bleep twice to indicate that the wireless link has been established.

**REMARK:- IF THE PIR IS OPERATED BY A 9V BATTERY, WHEN THE BATTERY IS WEAK THE RED LIGHT WILL BE FLASHING AND IT WILL NOT ACTIVATE THE DEVICE. PLEASE CHANGE THE BATTERY.**

**PIR POWER SUPPLY CAN BE CONNECTED BY 12V DC FROM ADAPTOR (CABLE INCLUDED IN THE PACKING)**



**WATER RELEASE TUBING CONNECTION** (white tubing included in the packing)



Insert one end of the white tubing into the snap-in nipple at the bottom of the "Universal" device (as shown)

Insert the other end of the white tubing into the snap-in nipple at the outlet valve of the "Universal" device (as shown) (cut the tubing if it is too long)

**"UNIVERSAL" DEVICE AIR OUTLET CONNECTION METHODS :-**

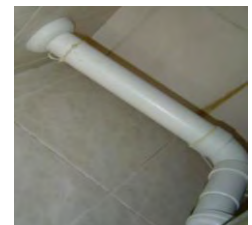

out side wall